

---

## FH Batteries Using Instruction

### I、Instruction on FH series Handicam:


1. Open “FH” cover of the battery (Ref. Picture 2) and connect one terminal of the cable to DC output of the battery and indicator turns to green; (Ref.: Picture 3)

2. Put the battery to camera (Ref.: Picture 4),.

3. Connect the other terminal of the cable to DC input place of the camera and it can work (Ref.: Picture 5 & 6).

**\* Please save your pictures and have the battery charged when indicator light turns to yellow as there is only 10mins to 20mins' photographing.**

**Remark: Please take out of the battery if no use. (Ref.: Picture 7),.**

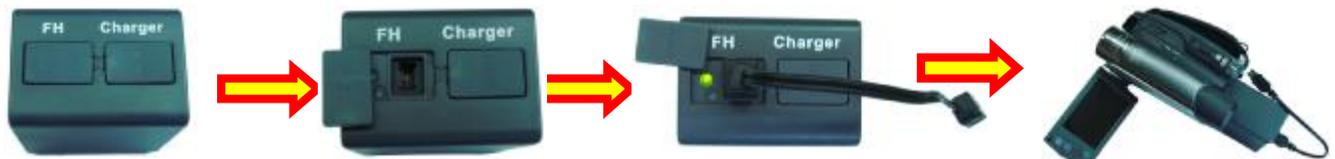

Picture 1

Picture 2

Picture 3

Picture 4



Picture 5

Picture 6

Picture 7

### II、Instruction on FP series Handicam:

1. It can be directly use after putting battery to camera without cable. (Ref.: Picture 8)

2. It also works if using cable according to above instruction like “I”

### III、Instruction on battery charge function:

1. Open “Charger ” cover, connect one terminal of the cable to “charger” socket and charge the battery with Sony AC-L25A and AC-VQP10 charger. (Ref.: Picture 12 & 13) . The indicator turns to be yellow when charging and it turns out after finishing charging. (Ref.: Picture 9, 10 & 11)

2. The battery can be charged by all Sony FP & FH series charger (Ref.: Picture 14).



There is time indicating

Picture 8



Picture 9



Indicator is yellow

Picture 10



Indicator turns out after finishing charging

Picture 11



Picture 12



Picture 13



Picture 14